



Classroom A/V Control Panel

Use for ALL Audio/Video Controls



Turn the Projector **ON/OFF** →

Select **INPUT** for Projector →

Wireless Mics to Speakers in the Room →

← Speaker **VOLUME**

← Rear Camera

← Rear Camera **PAN/TILT**

← Rear Camera Position **PRESETS***

← Wireless **MIC VOLUME/ MUTE**

*To set Rear Camera Position Presets, hold Preset Button for 3 seconds. Repeat for Presets 2-8 for different camera angles at the touch of a button.

For classroom technology Issues contact Academic Technology 904-256-7507 or avsupport@ju.edu